
 
PRODUCT CODE ORYX202, ORYX204, ORYX208

Level 1 Access: Allows SILENCE BUZZER operation only (CONTROLS ENABLED Yellow LED Off)

Level 2 Access: Allows full control (CONTROLS ENABLED Yellow LED On)



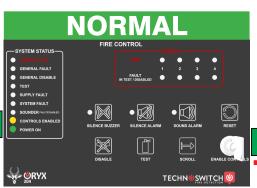










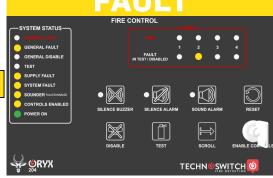

STEPS

NB: Controls must be enabled to perform SILENCE ALARM and RESET.

- 1. Press SILENCE BUZZER:
 - Internal buzzer will silence.
 - Fire LEDs will change from flashing to steady.

The SILENCE BUZZER button's Yellow LED will switch on.

- 2. Press SILENCE ALARM:
 - Sounders will silence.

The SILENCE ALARM button's Yellow LED will switch on.

VERIFY FOR FIRE OR A FALSE ALARM

IF FIRE CONDITION

- 1. Press SOUND ALARM:
 - Sounders will re-activate.

The **SOUND ALARM** button's Yellow LED will switch on.

- 2. Contact Emergency Services.
- 3. Follow your standard Emergency Evacuation Procedure.

IF FALSE ALARM

Once false alarm has been confirmed:

- Press RESET and panel will return to Normal state.

NB: Reset can only be performed if controls are enabled.

STEPS

IF FAULT CONDITION

- 1. Press SILENCE BUZZER
 - Fault LEDs will change from flashing to steady.
- 2. Identify the Fault condition on the panel fascia.
- 3. Contact your service provider.
 - EMERGENCY CONTACT DETAILS (place sticker here)
 - SERVICE PROVIDER CONTACT DETAILS (place sticker here)

• DISCLAIMER: Although the contents of our product literature have been prepared with the greatest care, Technoswitch can accept no liability whatsoever for any direct or indirect damages of any kind that may arise due to either errors or omissions in them, or amendments to products or other specifications following publication.

© Technoswitch (Pty) Ltd

